





-  Redial
-  Menu
-  Transfer Call

 Dial numbers with the right directional key

## Mitel 6865i with peoplefone

Freely programmable function keys P1 - P8  
Default setting: Line

Fast-blinking LED = Incoming call

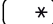
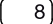

Steadily lit LED = In call

Slow-blinking LED = Call on hold


Other settings: BLF (Busy Lamp Field),



Speed Dial, Trasfer to

### Call pick up



  + internal number of the ringing device  
and then dial with the right directional key 

### Call transfer - Attended transfer

Put the call on hold with the  key, then dial the

number that you wish to transfer and press the right directional key  to dial. If the third party wishes to accept the call, press  again.

### Call transfer - Blind transfer

Put the call on hold with the  key, then dial the number that you wish to transfer and press  again in order to immediatly transfer the call

### Setup a Forwarding

Press the menu key  -> Navigate to the 1st option ->

Choose which rule you want to change -> Set a number to forward to -> Switch the status to "On"

### Disable a Forwarding

Same steps as above, except the status is set to "Off".

This just deactivates it, for simple reactivation later.

### Change the used Identity

User the left  and right  direction keys to cycle trough the different identities of the phone

### Reboot the phone

Open the Menu  and navigate the 6th option "Restart Phone"