


Mitel 6867i with peoplefone

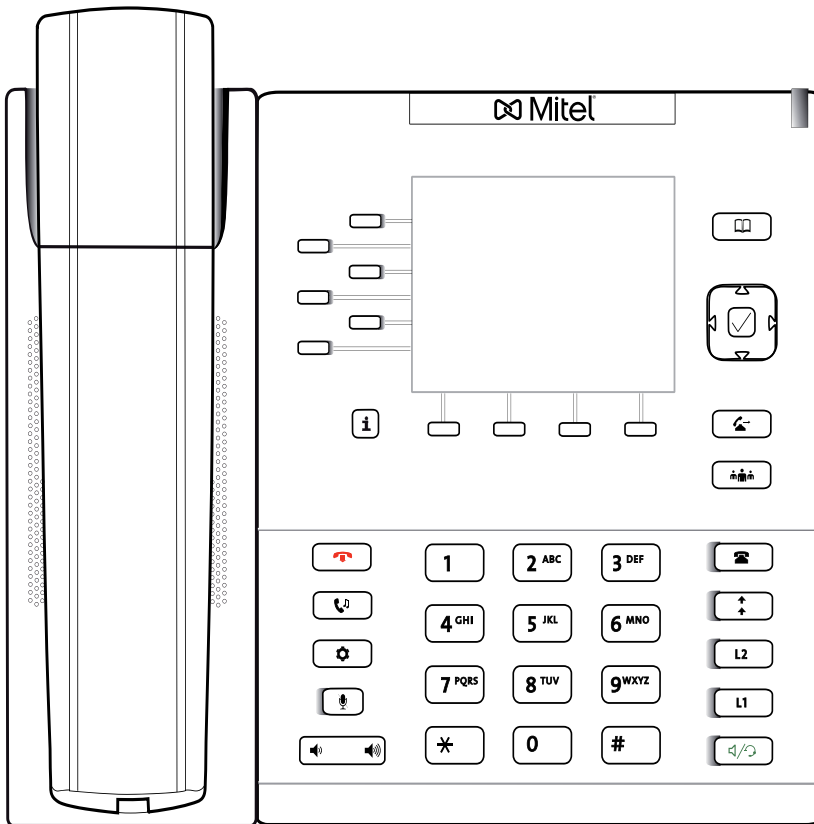

Freely programmable function keys P1 - P20
Default setting: Line

Fast-blinking LED = Incoming call

Steadily lit LED = In call

Slow-blinking LED = Call on hold

Other settings: BLF (Busy Lamp Field),

Speed Dial, Transfer to

Call pick up

By pushing a LED key (P1 - P20 programmed as BLF or
 + internal number of the ringing device.

Call transfer - Attended transfer

Put the call on hold with the key, then dial the

number that you wish to transfer to and press the Dial
display button, if the third party wishes to accept
the call, press again.

Call transfer - Blind transfer

Put the call on hold with the key, then dial the
number that you wish to transfer and press again
in order to immediately transfer the call

Setup a Forwarding

Press the menu key -> Navigate to the 2nd option on
the left- > Choose which rule you want to change ->
Set a number to forward to -> Activate the check
mark on the right side

Disable a Forwarding

Same steps as above, except the status is set to
"Off".

This just deactivates it, for simple reactivation later.

Change the used Identity

Use the right direction keys to access the line
overview, here you can navigate between the lines
with the up and down direction keys and pick one to
make the next call

Reboot the phone

Open the Menu and navigate all the way to
the right to the option "Restart Phone"

Call history (missed, received, dialed calls.

Redial the last call made or received

LDAP Directory

Redial

Menu

Hold / unhold call

Transfer Call