

Snom 300 / D315 with peoplefone



Freely programmable function keys P1 - P6
Default setting: Line

Fast-blinking LED = Incoming call
Steadily lit LED = In call
Slow-blinking LED = Call on hold
Other settings: BLF (Busy Lamp Field), Speed Dial, Transfer to, Mute, Hold

Call pick up

By pushing a LED key (P1 - P6) programmed as BLF or + internal number of the ringing device

Call transfer - Attended transfer

Put the call on hold , then dial the number that you wish to transfer to. If the third party wishes to accept the call press and

Call transfer - Blind transfer

Put the call on hold , then dial the number that you wish to transfer to and press

Setup a Forwarding

Access the Menu with the down direction key Select "Call Features"-> "Call Forwarding" -> Choose which rule you want to change -> Set a number to forward to -> Switch the status to "Enabled"

Disable a forwarding

Same steps as above, except the status is set to "Disabled"
This just deactivates it, for simple reactivation later

Change the used Identity


Use the left and right direction keys to cycle through the different identities of the phone.

Restart the phone

Push the combination:

Reset the Phone to factory defaults

Restart the phone and hold the key while the phone is booting, then choose the option 1 "Settings Reset"

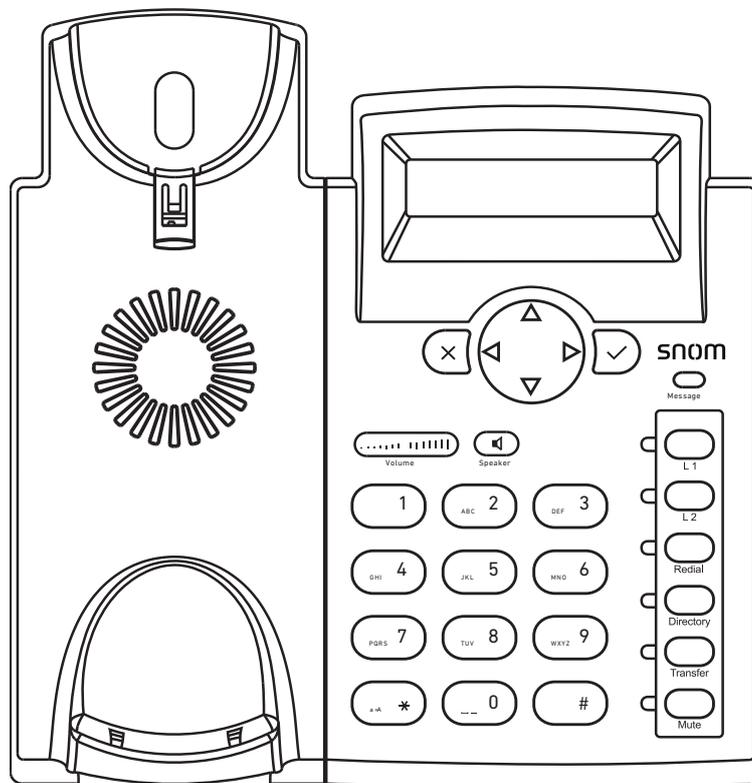

Put the call on Hold



Transfer



Mute



Redial while not in a call



Redial



Directory

ATTENTION! The Transfer and Mute Keys have to be set in the provisioning as Function Keys or else they will be empty

ATTENTION The Directory and Redial Keys cannot be set trough provisioning. You can redial with and access the company phonebook with the up direction key