

Snom D745 with peoplefone

- ☐ Freely programmable **BLF** keys P1 - P32
Default setting: Line
Fast-blinking LED = Incoming call
Steadily lit LED = In call
Slow-blinking LED = Call on hold
Other settings: BLF (Busy Lamp Field),
Speed Dial, Transfer to

Call pick up

By pushing a LED key (P1 - P15) programmed as BLF or
☐ * ☐ 8 + internal number of the ringing device.

Call transfer - Attended transfer

Put the call on hold ☐ ⏸, then dial the number that
you wish to transfer to. If the third party wished to
accept the call press ☐ ↔ and ✓

Call transfer - Blind transfer

While on the line, press ☐ ↔ then dial the number that
you wish to transfer to and press ✓.

Setup a Forwarding

Press the Menu Key ☐ ⚙ -> Select "Call Features"
-> "Call Forwarding" -> Choose which rule you want to
change -> Set a number to forward to -> Switch the status
to "Enabled"

Disable a Forwarding

Same steps as above, except the status is set to
"Disabled".

This just deactivates it, for simple reactivation later.

Change the used Identity


Use the left < and right > direction keys to cycle through
the different identities of the phone

Reboot the phone

Push the combination: ☐ * ☐ * ☐ # ☐ *

Reset the Phone to factory defaults

Restart the phone and hold the ☐ # key while the phone is
booting, then choose the option 1 "Settings Reset"

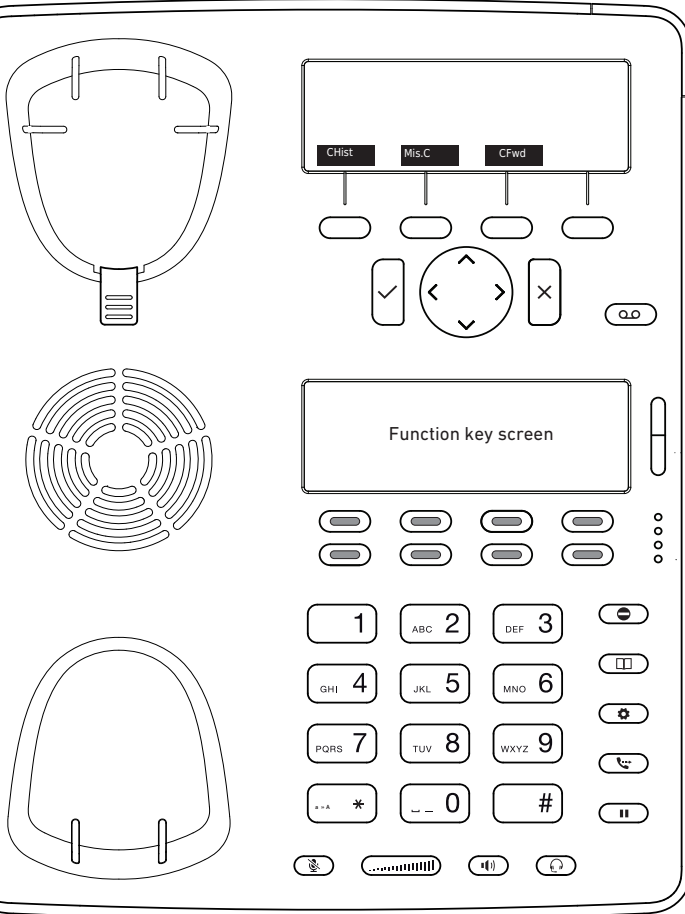

- CHist** Call history (missed, received, dialed calls.
- Mis.C** Missed calls
- CFwd** Forwarding all calls (Turn on/off)
- ☐ Listen to your voicemails
or record a personal welcome message

- ☐ Turn DND (do not disturb) on / off
- ☐ Directory LDAP
- ☐ Transfer call
- ☐ Hold / unhold call
- ☐ Menu